



Chair Pieces:

- 1x Backrest
- 1x Rear Support
- 1x Seat Pan
- 1x Short Side Piece
- 1x Long Side Piece (w/Armrest)


Hardware:

- 2x Long Screws
- 2x Short Screws
- 1x Metal Bracket
- 8x Metal Dowels (pre-installed)
- 2x Short Bolts
- 6x Long Bolts




1. Loosely attach backrest to the rear support.


*Do not fully tighten screws yet.

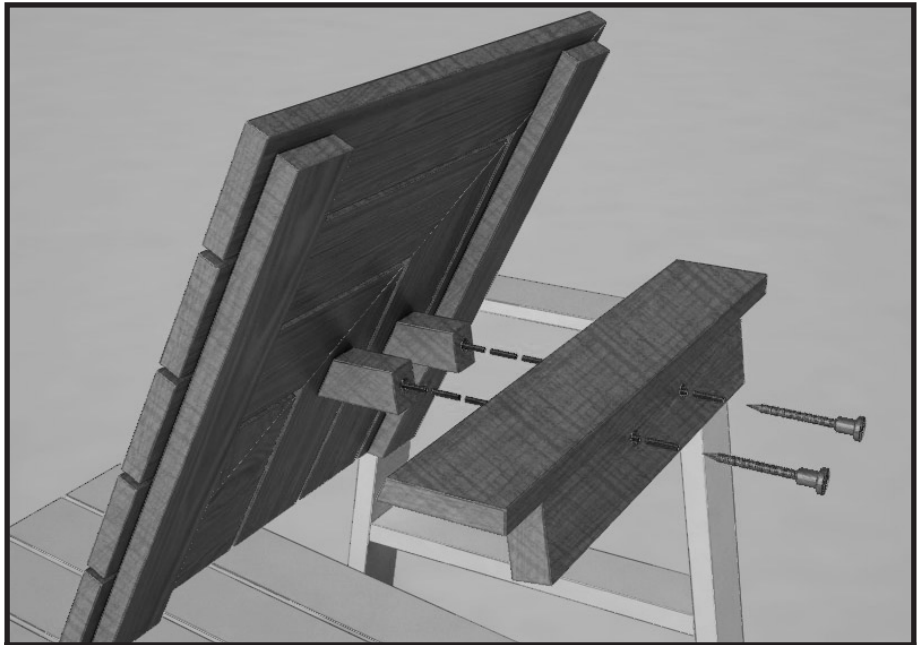


2. Attach metal bracket to the bottom of the rear support

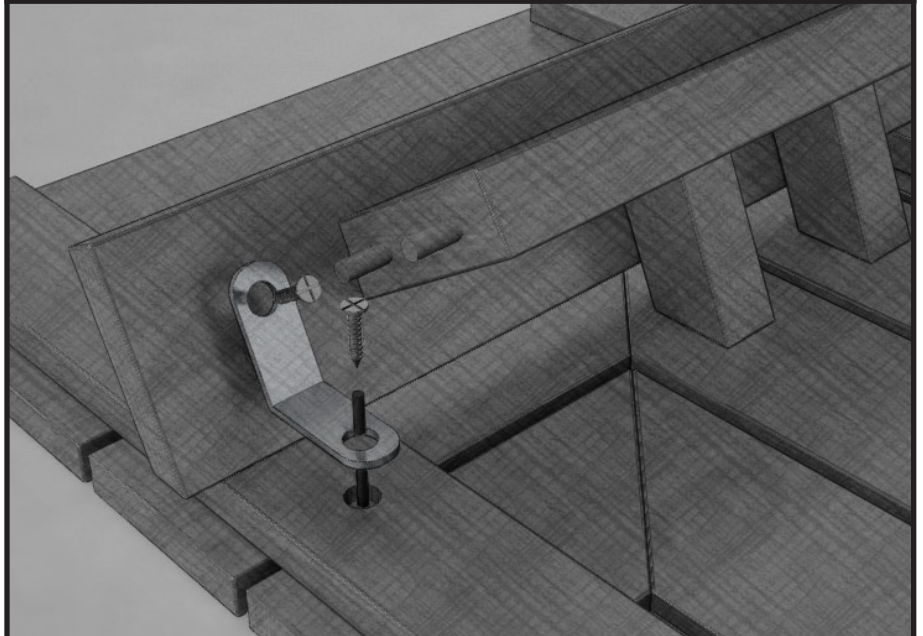


3. Attach the backrest to the seat pan

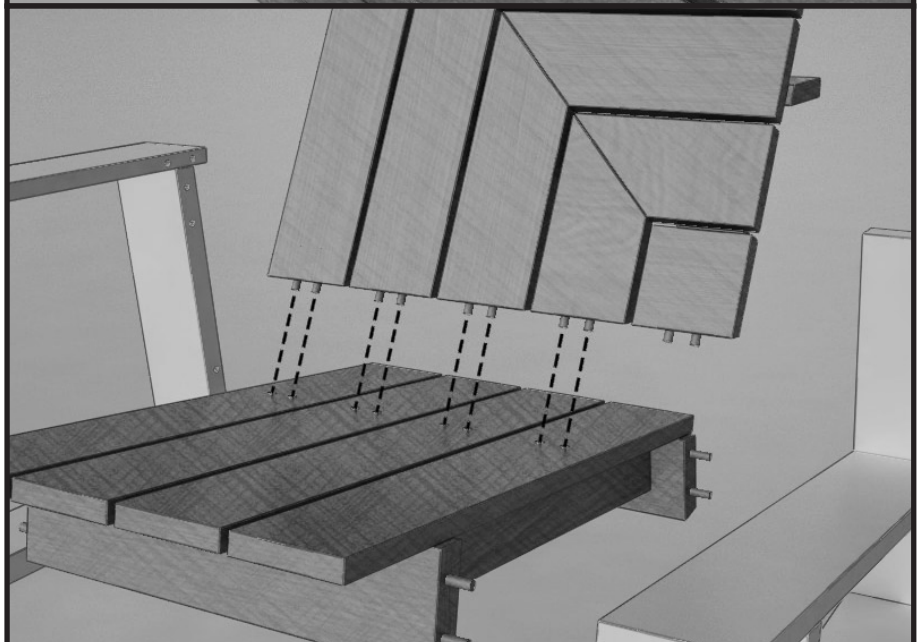


4. Place the short side-piece (without armrest) on its side, attach pieces together

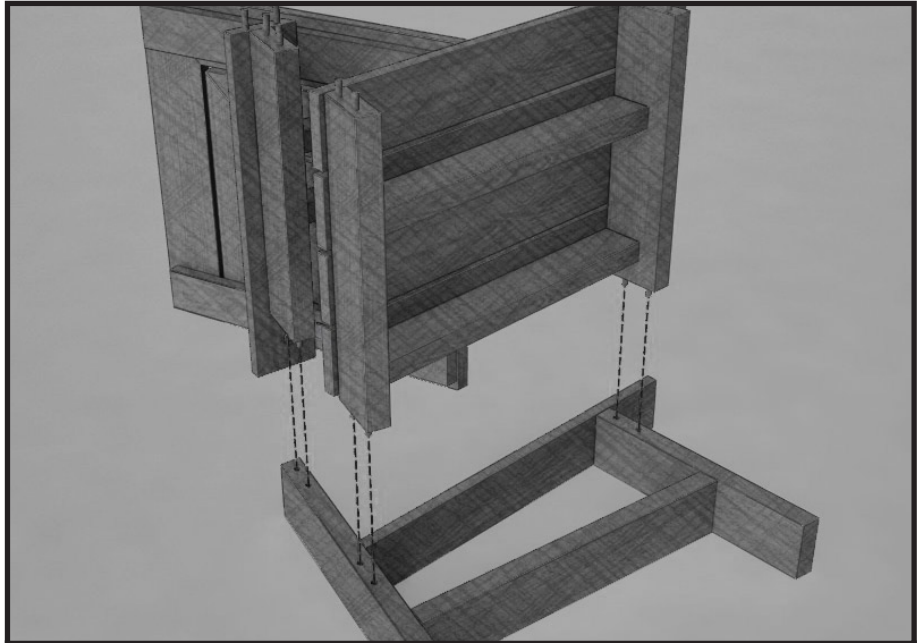

5. Repeat Step 4 on the other side (long side-piece with armrest).

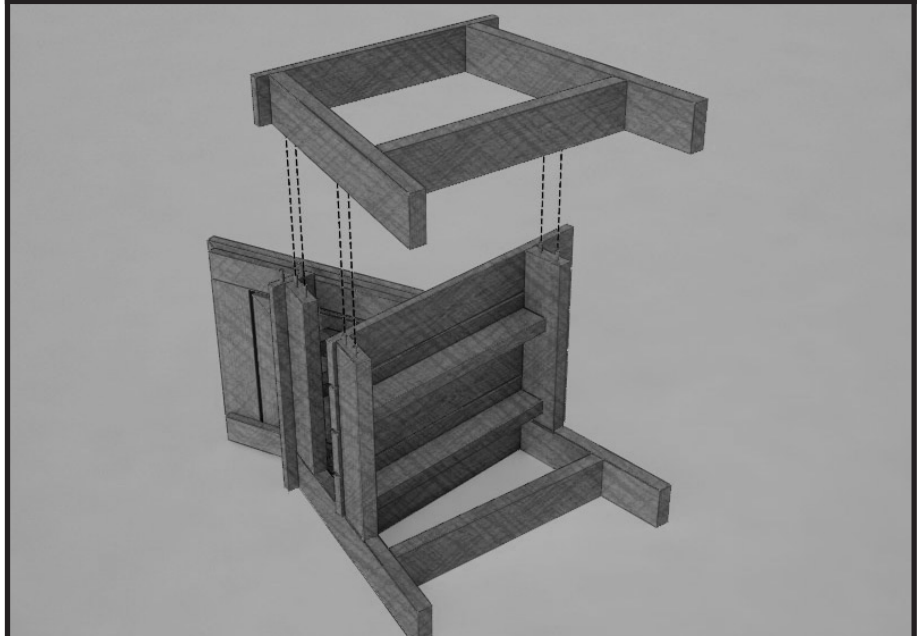


6. Fully tighten rear support screws from Step 1

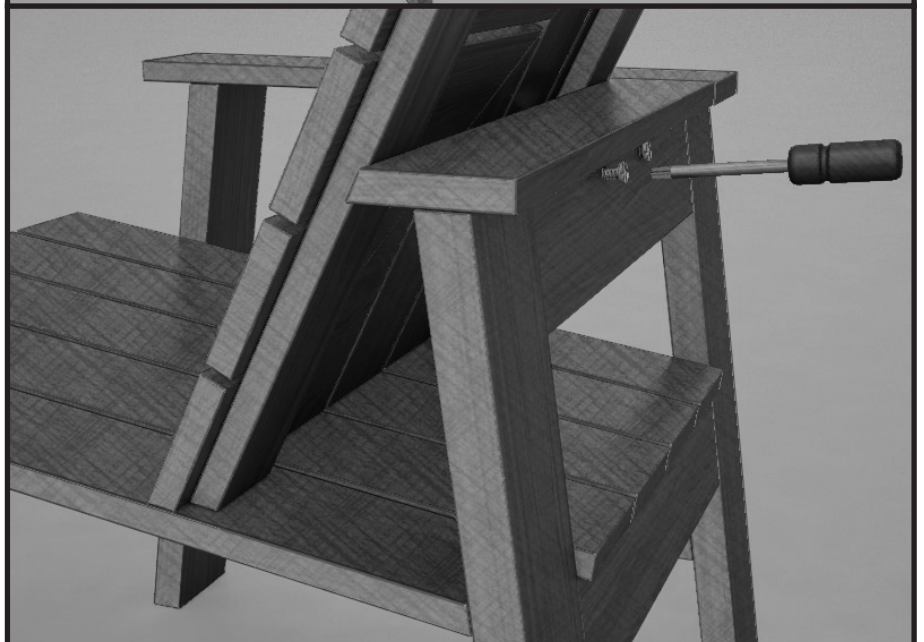


7. Metal dowels are pre-installed. Insert long bolt from sides on all four locations.

Align long bolt through hole of metal dowel, then tighten bolt.

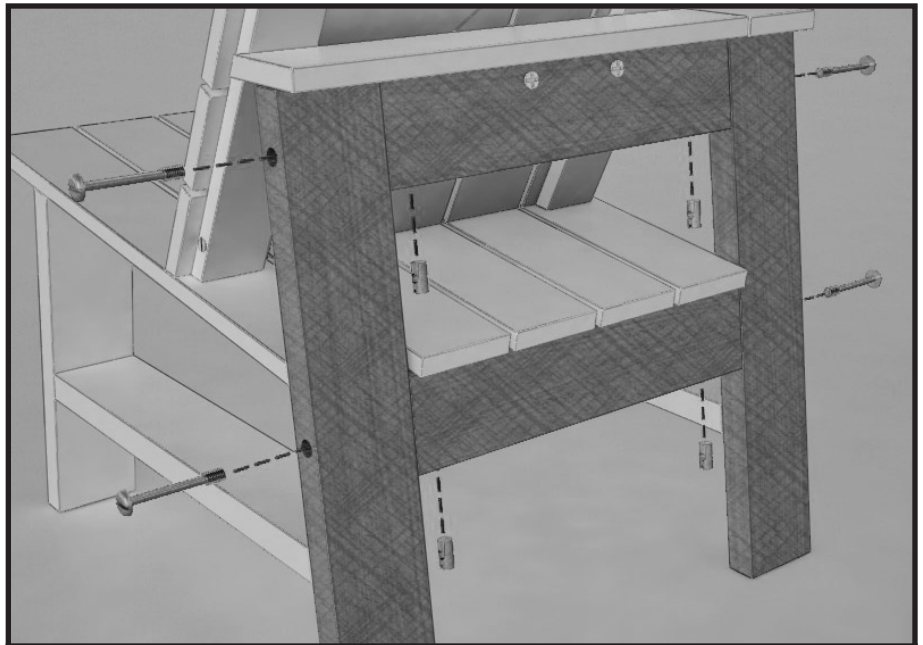


8. Insert long bolts at the two locations in front into pre-installed metal dowels.

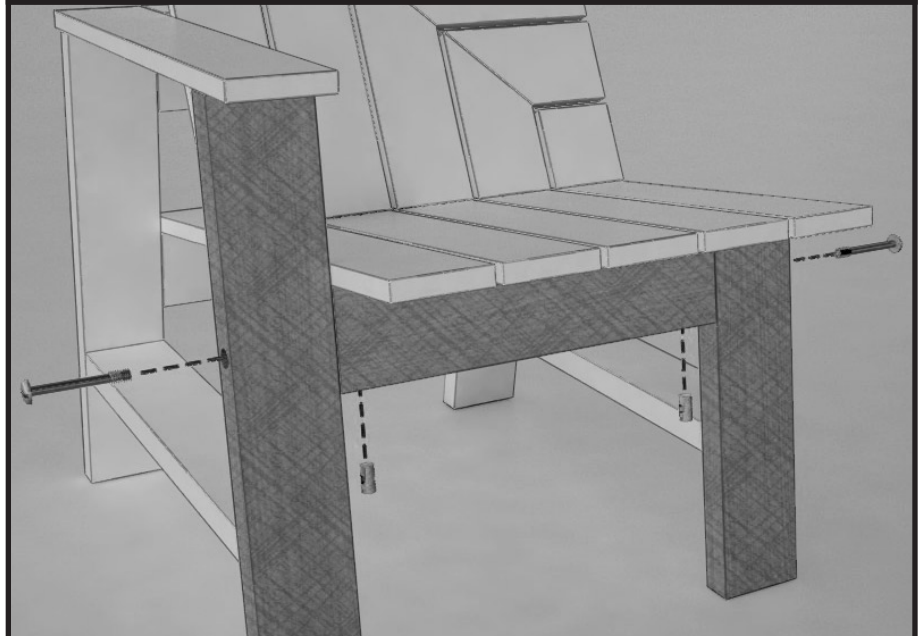

9. Attach bolt from the bottom of back support into pre-installed metal dowels.

*Repeat on other side of the chair.

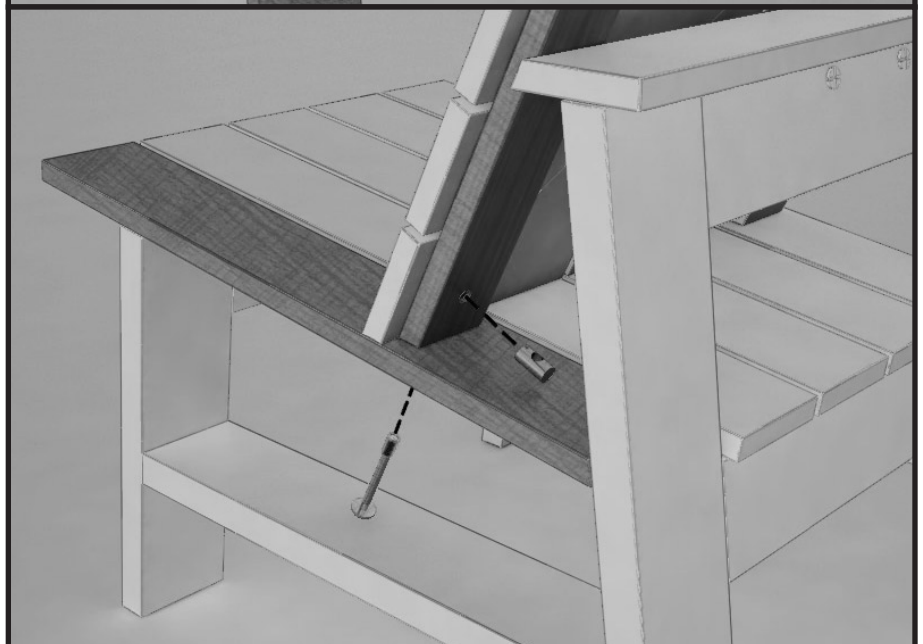

Assembly is completed.